


# Build Your Own Magliner Hand Truck

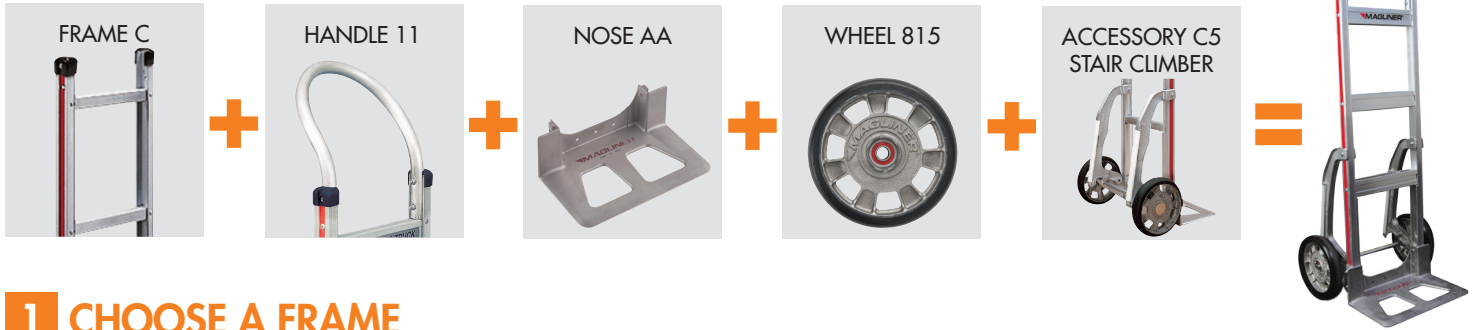

## 1 CHOOSE A FRAME



P/N	M/N	HT.(IN.)	WT.(LBS.)
300001	1	39	6.0

Straight back with 1-1/4" cross braces.



P/N	M/N	HT.(IN.)	WT.(LBS.)
300021	5	39	5.0

Curved back with 1-1/4" cross braces.

## 2 CHOOSE A HANDLE

### Horizontal Loop



P/N	M/N	WT.(LBS.)
301000	11	1.0

Standard loop.



P/N	M/N	WT.(LBS.)
301008	19	1.5

Standard loop with vinyl sleeve.



P/N	M/N	WT.(LBS.)
301001	24	1.0

Standard loop with straight top.



P/N	H"	M/N	WT.(LBS.)
301126	55	13B	3.0
301127	60	13C	3.3

Welded pistol grip.



P/N	M/N	H"	WT.(LBS.)
301004	17	52	2.0

Welded pistol grip.

### Double Grip



P/N	M/N	WT.(LBS.)
86031	16	2.0

Bolted double grip with universal brace.



P/N	M/N	H"	WT.(LBS.)
301137	30	52	2.5

Welded double grip.

### Vertical Loop



P/N	M/N	H"	WT.(LBS.)
300981	15A	52	2.35
300990	15A	52	2.35
300978	15C	60	3.5
300977	15C	60	3.5

Welded vertical loop.



P/N	M/N	H"	WT.(LBS.)
300994	60	52	2.0

Welded vertical loop.

### Double Loop



P/N	M/N	H"	WT.(LBS.)
301115	25B	55	3.0

Welded double loop.



P/N	M/N	H"	WT.(LBS.)
302297	35B	55	3.0
302298	35D	62	3.5

Welded double loop.



CALL 1-800-565-0606 TO ORDER!

106 Burbridge Ave., Dartmouth, NS B3B 0G7  
Email [sales@cabotss.com](mailto:sales@cabotss.com) Web [www.cabotss.com](http://www.cabotss.com)

### 3 CHOOSE A NOSE



ALUMINUM				
P/N	M/N	W"	D"	WT.(LBS.)
300200	AA	14	7-½	4.0
300201	UA	18	7-½	5.0

P/N	M/N	W"	FLUSH MOUNT		RECESSED MOUNT*	
			D"	D"	WT.(LBS.)	
300244	E1	14	9	7-⅛	4.5	
300254	E2	14	9	N/A	5.0	
300245	G1	18	9	7-⅛	5.5	
300248	G2	18	9	N/A	6.0	
300203	K1	16	12	N/A	7.0	
300215	K2	20	12	N/A	8.5	

6000 series alloy designed with a tapered profile and leading edge for ease of use and maximum strength to weight ratio.

\*Recessed mount not available on narrow-aisle models.

### 4 CHOOSE A TIRE

<h4>Solid Rubber</h4> <table border="1"> <thead> <tr> <th>P/N</th> <th>M/N</th> <th>D"</th> <th>WT.(LBS.)</th> </tr> </thead> <tbody> <tr> <td>10815</td> <td>815</td> <td>8</td> <td>2.5</td> </tr> </tbody> </table> <p>Mold-on rubber on die-cast hub with semi-precision bearings.</p>	P/N	M/N	D"	WT.(LBS.)	10815	815	8	2.5	<h4>Pneumatic</h4> <table border="1"> <thead> <tr> <th>P/N</th> <th>M/N</th> <th>D"</th> <th>WT.(LBS.)</th> </tr> </thead> <tbody> <tr> <td>121060</td> <td>1060</td> <td>10</td> <td>4.5</td> </tr> </tbody> </table> <p>4-ply tube-type tire with three-piece off-set hub and semi-precision bearings.</p>	P/N	M/N	D"	WT.(LBS.)	121060	1060	10	4.5	<h4>Microcellular</h4> <table border="1"> <thead> <tr> <th>P/N</th> <th>M/N</th> <th>D"</th> <th>WT.(LBS.)</th> </tr> </thead> <tbody> <tr> <td>131010</td> <td>1010</td> <td>10</td> <td>4.0</td> </tr> </tbody> </table> <p>Puncture resistant, non-marking, tire on one-piece steel hub with semi-precision bearings.</p>	P/N	M/N	D"	WT.(LBS.)	131010	1010	10	4.0
P/N	M/N	D"	WT.(LBS.)																							
10815	815	8	2.5																							
P/N	M/N	D"	WT.(LBS.)																							
121060	1060	10	4.5																							
P/N	M/N	D"	WT.(LBS.)																							
131010	1010	10	4.0																							

### 5 CHOOSE YOUR ACCESSORIES

<h4>Stair Climbers</h4> <table border="1"> <thead> <tr> <th>P/N</th> <th>WT.(LBS.)</th> </tr> </thead> <tbody> <tr> <td>86006</td> <td>2.5</td> </tr> <tr> <td>86092</td> <td>2.5</td> </tr> </tbody> </table> <p>Heavy-duty cast stair climbers with replaceable low-friction polymer glide bars. Narrow aisle models only.</p>	P/N	WT.(LBS.)	86006	2.5	86092	2.5	<h4>Wheel Guards</h4> <table border="1"> <thead> <tr> <th>P/N</th> <th>H"</th> <th>W"</th> <th>WT.(LBS.)</th> </tr> </thead> <tbody> <tr> <td>301114K</td> <td>8-½</td> <td>2-½</td> <td>1.5</td> </tr> </tbody> </table> <p>Wheel guards prevent loads from rubbing against hand truck wheels.</p>	P/N	H"	W"	WT.(LBS.)	301114K	8-½	2-½	1.5
P/N	WT.(LBS.)														
86006	2.5														
86092	2.5														
P/N	H"	W"	WT.(LBS.)												
301114K	8-½	2-½	1.5												

### 6 FINALIZE

Finish off your truck with the required completion pack #301040 (1 required per truck). For 815 wheels, use completion pack #301041.

More accessories available in the full catalogue.



**CALL 1-800-565-0606 TO ORDER!**

106 Burbridge Ave., Dartmouth, NS B3B 0G7  
 Email [sales@cabotss.com](mailto:sales@cabotss.com) Web [www.cabotss.com](http://www.cabotss.com)